

Brinsea

ChickSafe eco

Installation and Operating Instructions

- * **Important! Install the ChickSafe Eco and attach the door BEFORE installing batteries. Failure to observe this may cause incorrect operation and possible damage.** (See page 3).
- * **The ChickSafe is supplied pre-set to be attached to a FULLY OPEN DOOR. Failure to observe this will cause incorrect operation and possible damage.** (See page 3).

Please read these instructions carefully before setting up your ChickSafe Eco to achieve best results and keep these instructions safe for future reference.

To register your new Brinsea product and qualify for your free 3 year guarantee please visit www.brinsea.co.uk within 30 days of purchase and follow the link on the Brinsea home page. The serial number may be found on the box and inside the battery compartment. Sign up for the Brinsea newsletter to receive the latest news and information.



- * **Warning - Risk of injury! Keep fingers clear of moving door and cord. Motor may start without warning.**
- * **Ensure the maximum door weight of 4.0kg is not exceeded as this will cause damage to the motor and invalidate the guarantee! Note that wooden doors are heavier when wet.**
- * **The maximum door lifting height is 400mm. Do not exceed this as operation will be incorrect and the cord may become detached.**
- * **Check the sliding door to make sure it runs smoothly and reliably both upwards and downwards. The ChickSafe uses gravity alone to close the door.**
- * **To mount the ChickSafe further away from the door, an additional length of cord may be attached. For helpful information see our ChickSafe 'Frequently Asked Questions' page at www.brinsea.co.uk**
- * **This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.**

Tools needed for installation:


- Screwdriver (cross head PZ1)
- Drill with a 3mm diameter drill bit, or bradawl
- Tape measure

Caution! - Please Note:

- Use only alkaline AA batteries
- Observe correct polarity to prevent leakage or risk of fire
- Do not mix old and new batteries
- Do not use re-chargeable batteries
- Do not use a 9 volt battery
- Remove the batteries if you do not intend to use the ChickSafe Eco for a long period.

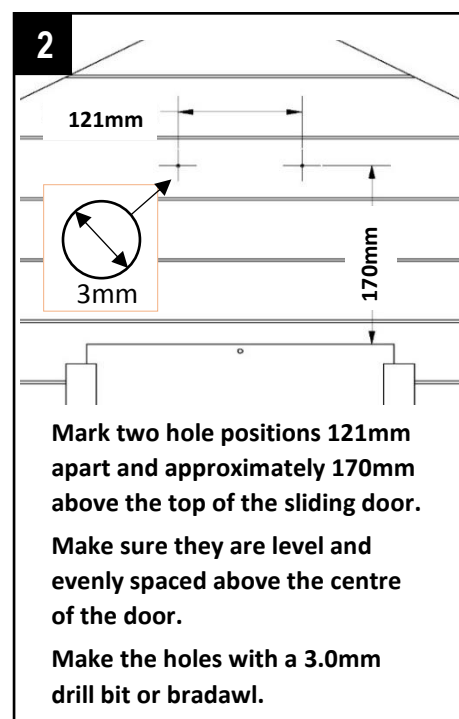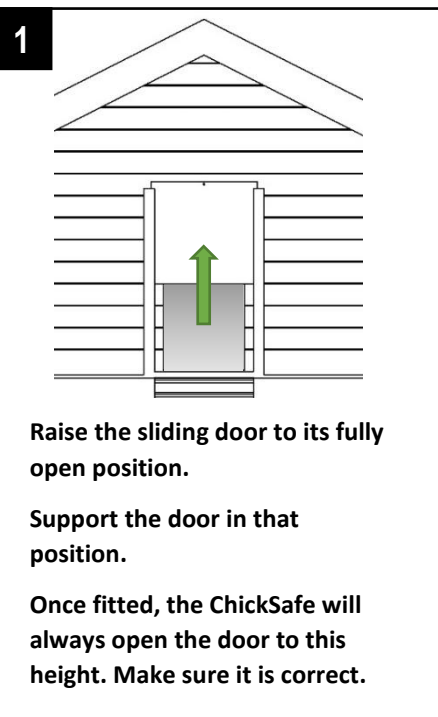

3

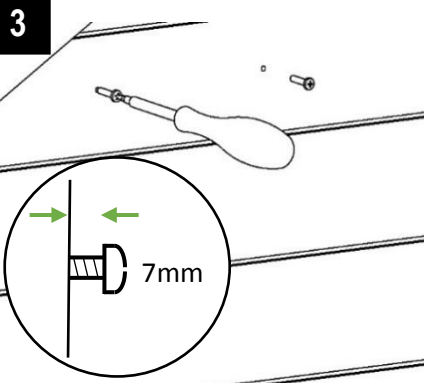

Start to fit the two screws supplied into the holes you have made.

Tighten each screw until its head is 7mm from the surface.

4



Hang the ChickSafe on the two screws.

Gently tighten each screw to make the ChickSafe secure.

Make sure the ChickSafe remains flat against the fixing surface.

5




Make a hole or fix a ring to the centre of the top of the door as necessary.

Tie the ChickSafe cord to the hole/ring.

Make sure the cord is taut once tied on.

Now allow the door to hang on the cord.

6

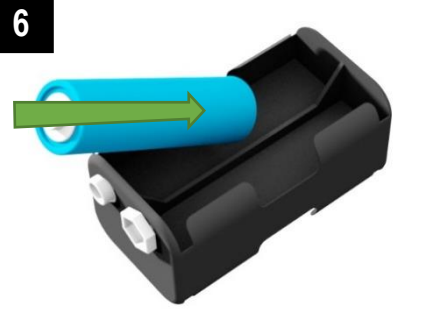

Fit the batteries into the holder.


Check the polarity of each battery!

7



The battery holder fits this way up in the top of the ChickSafe.


8

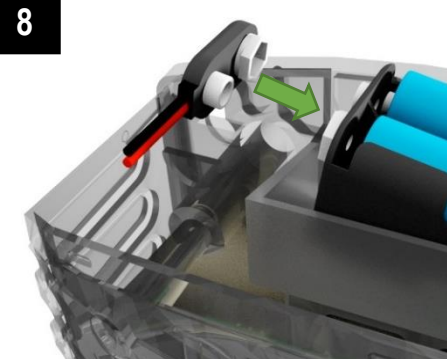

Fit the connector to the battery holder.

After 10 seconds the motor will operate briefly.


9

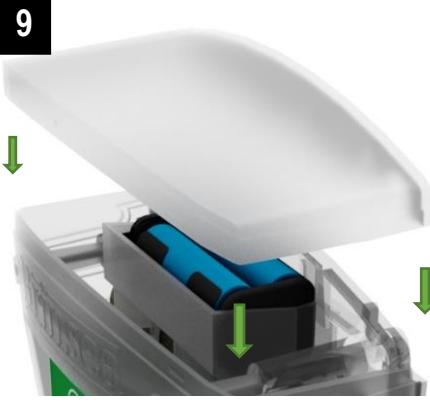

Fit the battery cover over the top.

It pushes down into place.

10




The ChickSafe is now ready!

The door will be opened or closed according to daylight.






11


Check operation carefully for the first few days to ensure the installation is successful and the door is operating smoothly.

The red indicator LED provides information on current status. Please continue reading for more information!





-  Single flash every 30 seconds – Door is open
-  Double flash every 30 seconds – Door is closed
-  Single flash every 10 seconds – Door is open, replace batteries soon!
-  Double flash every 10 seconds – Door is closed, replace batteries soon!
-  Single flash every second – Door is stuck or batteries too discharged to open the door. Investigate cause!

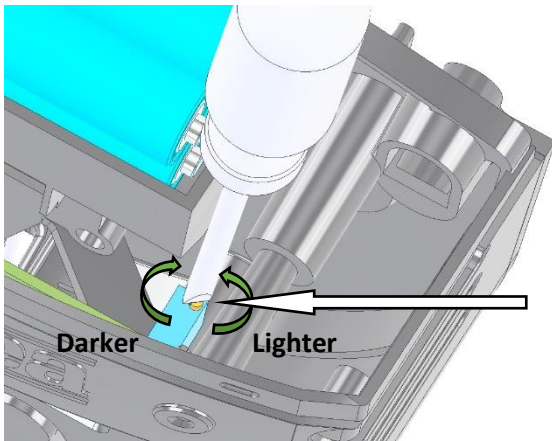

Closing Light Level Adjustment

Closing light levels at dusk vary with location and direction of installation. The light level that makes the door close may be adjusted:

- 360 degree turn clockwise to decrease light level (darker).
- 360 degree turn anti-clockwise to increase light level (lighter).
- (Use a small, flat precision-screwdriver).

Adjust by one turn at a time. The adjustment range from the factory setting is approximately 5 turns darker (clockwise), 15 turns lighter (anti-clockwise). Adjusting further than this range has no effect.

Cleaning:

- Disconnect the battery holder before cleaning the ChickSafe Eco.
- Keep the battery holder and electrical connections dry at all times.
- Do not immerse the ChickSafe Eco in water.
- Wipe surfaces clean with a damp cloth and mild detergent as necessary.

Reset:

If the batteries have been connected before the door is installed, or if the cord has become detached from the door, it may be necessary to reset the system:

1. The ChickSafe must be upright in its installed position.
2. Disconnect the battery holder connector.
3. Wait 1 minute.
4. Gently pull the end of the cord down and, while pulling, refit the battery holder connector.
5. Maintain tension on the cord. After 10 seconds the cord will be wound out for a second and then start to wind in.
6. Keep maintaining tension on the cord all the time until the motor stops.
7. Disconnect the battery holder.

The system is now reset to the factory position. Follow the installation instructions from the start to ensure the door opens to the correct position. For helpful information see our ChickSafe 'Frequently Asked Questions' page at www.brinsea.co.uk

Declaration of Conformity

We: BRINSEA PRODUCTS LTD.

32-33 Buckingham Road
Weston Industrial Estate
Weston-super-Mare
North Somerset
BS24 9BG

Declare under our sole responsibility the products:

Automatic hen house door openers:

ChickSafe Eco (Serial numbers CS010/xxxxxxxx)

ChickSafe Eco with Door (Serial numbers CS015/xxxxxxxx)

ChickSafe Advance (Serial numbers CS020/xxxxxxxx)

ChickSafe Advance with Door (Serial numbers CS025/xxxxxxxx)

to which this declaration relates are in conformity with the following EU Directives:

2006/42/EC Machinery Directive

2014/30/EU Electromagnetic Compatibility Directive

2011/65/EU Restriction on the use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations

The relevant sections of the following Standards have been used:

EN 60335-1:2012+A13:2017

EN 55014-1:2006+A2:2011

EN 55014-2:1997+A2:2008

EN 50581:2012

The technical documentation for the products is available from the above address.

Authorised Representative: Ian Pearce, Managing Director

Signature:

Date of Issue: February 2020

Place of Issue: 32-33 Buckingham Road, Weston Industrial Estate, Weston-super-Mare, North Somerset, BS24 9BG, United Kingdom.

Automatic openers and accessories are intended to help keep chickens safe but the overall responsibility for the welfare and safety of livestock remains with the owner/keeper. Brinsea, its retailers or distributors will not be responsible for the loss of livestock or consequential loss in the event of failure however caused.

Product Dimensions: Height 150mm, Width 150mm, Depth 75mm. Weight 375g.



Used electrical and electronic products should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product to a designated collection point where it will be accepted free of charge.

Please contact your local authority for further details of your nearest designated collection point.

Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling.

Brinsea Products Ltd, 32-33 Buckingham Road, Weston Industrial Estate, Weston-super-Mare, N. Somerset, BS24 9BG

Tel: 0345 226 0120

+44 1934 417523

sales@brinsea.co.uk

www.brinsea.co.uk